
Henry Allergy

numatic.com

HVA160-11

Kit AS9




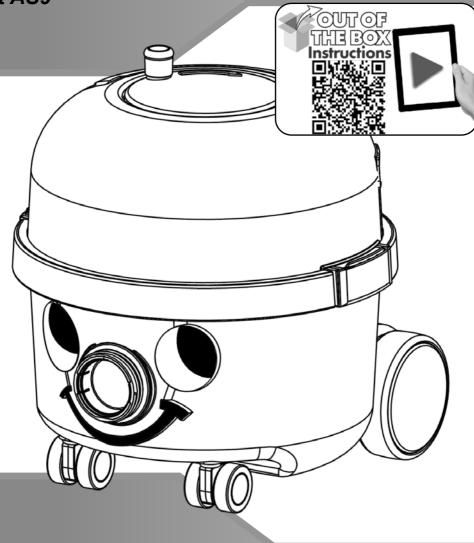


Original Instructions

CAUTION, Read the Instructions before using the machine.


Kit AS9

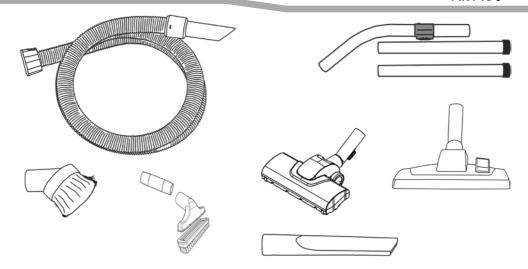



Assembly

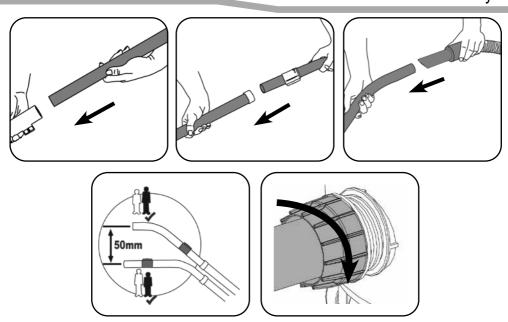


Using your machine

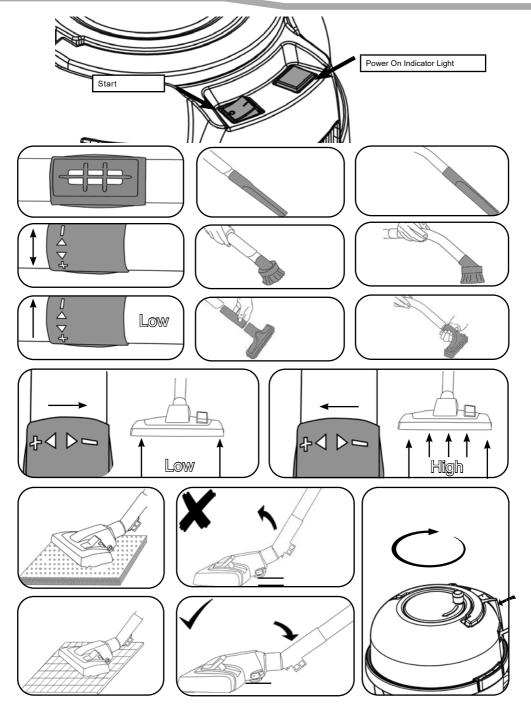


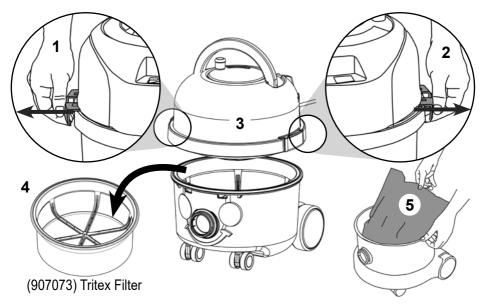


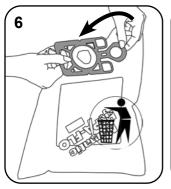




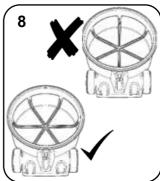


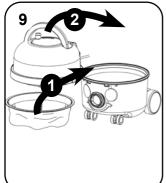


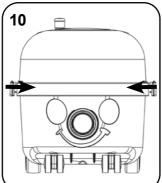


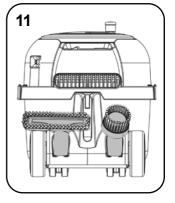



Changing the Filter

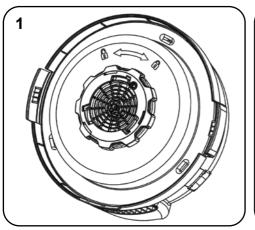


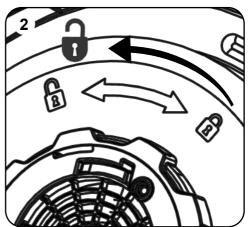

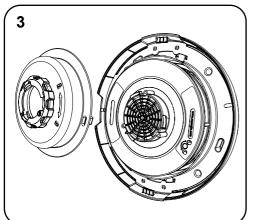


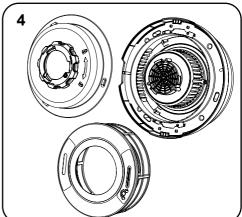


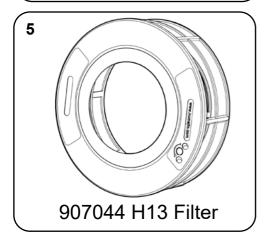

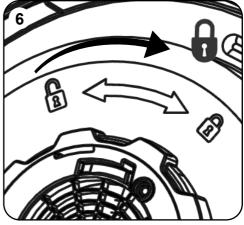



Fitting the Face

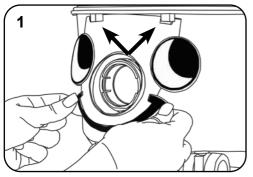

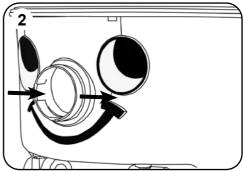



Removing the Face

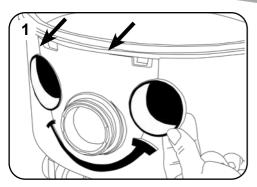


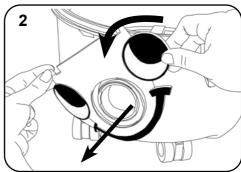


Cleaning the Floor Tool

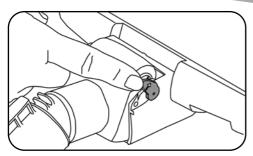

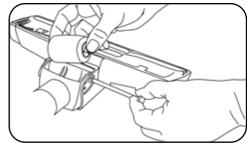


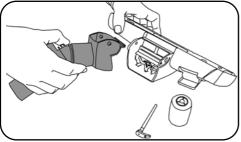

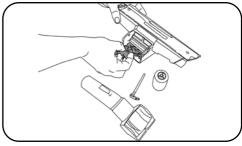


Wand Docking



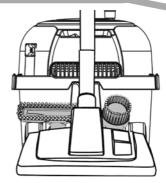

Schematic Diagram

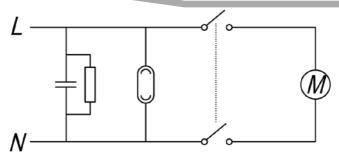

Replacement Parts

	TriTex Filter
907073	TriTex Filter
907044	H13 Post Motor Filter
	HepaFlo Dust Bags
909291	NVH 1CH (Pack of 3)
907076	NVH 1CH (Pack of 5)
907075	NVH 1CH (Pack of 10)

Data

1	2	3	4	5	6
Drum Size	Cleaning Range	Weight (Ready to work)	Sound Pressure	Protection Class	Dimensions

	1	2	3	4	5	6
160	6 L	25.7 m	7.7 kg	LpA ≤ 70 dB (A)	Class II	320 mm x 340 mm x 350 mm

About your machine (EN)

1	Company Name & Address
2	Model
3	Voltage / Alternating Current
4	Frequency
5	Rated Input Power
6	Weight
7	WEEE Logo
8	Protection Class 2 Symbol
9	Approval Mark
10	Machine yr/wk Serial Number



Maintenance

Daily

Keep the machine clean, including hoses and tubes.

Ensure the bag and filter are fitted.

Regularly examine the power cord.

Check dust bag frequently.

Check filters are clean.

Weekly - as daily and:-

Check for any worn or damaged parts and replace immediately.

WEEE Legislation (Waste, Electrical and Electronic Equipment)

Vacuum cleaner, accessories and packaging should be sorted for environmentally - friendly recycling.

(Only for UK/EU Countries)

Do not dispose of vacuum cleaner into household waste! According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its incorporation into national law.

Vacuum cleaners that are no longer suitable for use must be separately collected and sent for recovery in an environmentally - friendly manner.



PPE (personal protective equipment). That may be required for certain operations.











Ear Protection

Safety Footwear

Head Protection

Safety Gloves











Eye Protection

Protective Clothing

Dust / Allergens Protection

Hi Viz Jacket

Caution Floor Sign

NOTE: A risk assessment should be conducted to determine which PPE should be worn.

Failure to rectify the problem or in the event of a breakdown contact your Numatic dealer or the Numatic Technical helpline +44 (0)1460 269268

Safety Critical Components

Mains leads:

HO5-V2V2-F 10 m x 2 Core x 0.75 mm²

WARNING

Read the instruction manual before using the machine.

Operators shall be adequately instructed on the use of their machine.

As with all electrical equipment, care and attention must be exercised at all times during use, in addition to ensuring that routine and preventative maintenance is carried out periodically to ensure safe operation.

Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.

Maintenance should only be carried out by a qualified person.

This machine is for DRY USE only and must not be stored outside or used in wet conditions.

The machine shall be disconnected from the mains power by removing the plug from the power supply socket during cleaning or maintenance and when replacing parts or converting the machine to another function.

Only use the socket outlet on the machine for purposes specified in the instructions (if fitted).

This machine is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge.

This appliance is intended to be cleaned and maintained by an adult.

Children being supervised are not to play with the machine.

This machine is not a tov.

This machine is not suitable for picking up hazardous or explosive dust.

Contact your local distributor if you require a machine capable of performing these tasks.

CAUTION

Ensure that the filtration system fitted to the machine is suitable for the material being collected.

This vacuum cleaner is intended for indoor use in the collection of dry materials.

This machine should be stored indoors only.

NOTES

The primary use for this machine is commercial, for example in hotels, schools, hospitals, factories, shops and offices. This product complies with the requirements of clause 20 of IEC/EN 60335-2-69 Stability and Mechanical Hazards.

This vacuum cleaner is fitted with a thermal protection device. If the vacuum cleaner stops working, remove the plug from the wall before investigating where the fault lies.

If the vacuum cleaner has a blockage, switch off, remove the plug from the power socket, inspect the floor tool, tubes and hose for debris. If the floor tool, tubes and hose are clear, replace the dust bag and clean the filter.

The vacuum cleaner should be inspected after use for damage.

The vacuum cleaner should be stored in a dry place.

When moving from one place to another, consider the weight of the machine.

DO

- Keep your machine clean including hoses and tubes.
- Change dust bag frequently.
- · Keep filters clean.
- · Keep diffuser filter (where fitted) clean.
- Use filter bags, they will enhance performance and help keep machine clean.
- Use a Numatic Original filter bag under fine dust conditions.
- Keep hoses and tubes clear.
 - Replace any worn or damaged parts immediately.
- · Only use the brushes provided with the machine. The use of other brushes may impair safety.
- Regularly examine the power cord. If damage is found such as cracking or ageing the power cord must be replaced by a qualified person.
- Only replace the power cord with the correct Numatic approved replacement part.

DO NOT

- Pull on the cable to unplug the machine from the power supply.
- Use to suck up hot ashes or lighted cigarette ends.
- Use steam cleaners or pressure washers to clean the machine or use in the rain.
- Immerse in water for cleaning.
- Attempt machine maintenance or cleaning unless the power supply plug has been removed from the supply outlet.
- Use in wet environments or to collect wet materials.
- Under any circumstances place foreign objects including (but not limited to) air fresheners, air freshener capsules
 or scented beads of any type into the top filter of the machine. Doing so can be dangerous and risk damage to the
 machine and may invalidate the machine warranty.

Allergy Information

Allergy UK considers that HVA 160-11 (Henry Clean Air) may, in proper use, reduce exposure to house dust mite allergen and cat allergen.

Assessments carried out by Allergy UK indicate that an individual's exposure can be reduced but this does not mean that an individual's allergic symptoms will necessarily diminish.

Allergy UK's opinion applies to HVA 160-11 (Henry) and the allergens stated.

The product should only be used for its intended purpose and in accordance with the manufacturer's instruction at all times.

Exposure to allergens can be dangerous. If you believe that you may suffer from an allergy you should seek medical advice.

Allergy UK is the operational name for The British Allergy Foundation and is a national charity (charity registration No. 1003726) founded in 1991 with the aim of improving awareness and treatment of allergy.

Allergy UK focuses all types of allergy and has the support of a Health Advisory Board including medical specialists from variety of disciplines including dermatology, ENT surgery, respiratory medicine, paediatrics, ophthalmology, immunology and gastroenterology.

Allergy UK is a patient information service continuously striving to help sufferers to help themselves, often seeking ways to avoid, or reduce exposure to the allergens affecting them.

The Seal of Approval endorsement forms a part of this initiative.

Allergy UK Helpline: 01322 619898 Weekdays: 9am - 5pm

www.allergyuk.org
E Mail: info@allergyuk.

and life and may invalidate the Warranty.



Warranty

Numatic International Limited warrant to the original purchaser that its products are free of defects in both material or workmanship for the period shown below:-

Homecare and Cleancare Vacuum cleaners	2 Years
Rotary Floor Machines	2 Years
Twintec Auto Scrubber Dryer	1 Year
Vario Ride-On Scrubber Dryer	0 hours
Mopping, Compacts, Combi and Servocare Products	. 1 Year
Individual Accessories and Spare Parts	Months
Note: This warranty expressly excludes consumable parts such as carbon	
brushes, floor brushes, mops, batteries etc. that are considered replaceable	e from

time to time during the normal working life of the machine.

Using non Numatic dustbags can be detrimental to both machine performance

- A. The warranty period commences from the date the goods are purchased.
- B. All warranty claims must be processed through the Dealer from whom the equipment was purchased. The Dealer will co-operate with the purchaser throughout the warranty claims procedure and will arrange any necessary repairs using genuine Numatic parts.
- C. If the original Dealer is no longer able to fulfil his obligations please contact Numatic International Limited with full details of the claim and proof of purchase so that this may be processed without delay.
- D. Any warranty claim can only relate to the specific part that is proven to be at fault and for which a replacement will be supplied but cannot be extended to constitute a claim against the complete machine.
- E. Numatic International will supply the Dealer with any warranty parts required, subject to the claim being validated, after return of the faulty items in accordance with Numatic International Limited's General Conditions of Sale.
- F. Claims will not be accepted if they are the result of fair wear and tear, misuse or abuse of any kind.
- G. No replacement will be given unless the appropriate evidence of the validity of the claim has been provided to the satisfaction of Numatic International Limited.
- H. Numatic International Limited reserve the right to charge for any unnecessary work carried out as a result of an invalid claim.
- No variation to this warranty may be made or implied by any member of Numatic International Limited or its Dealers unless such variation is in writing and authorised by the Company



Numatic International Limited. Chard, Somerset, TA20 2GB

Telephone: 01460 68600 Fax: 01460 68458

UKCA Declaration of Conformity	

NA	Misson for last on a fine for a fine for a
Manuacturer	Chard
	Somerset TA20 2GB
	www.numatic.co.uk
Product:	HVA, NVR
Description:	Vacuum Cleaner – Commercial – Dry
We, Numatic hereby declare under our sol	We, Numatic hereby declare under our sole responsibility, that the above-mentioned product(s) is/are

we, number refers y actions under our sone responsibility, in conformity with the following directives and standards.

EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017	+ A15:2021	EN60335-2-69:2012	EN62233:2008	EN55014-1:2017 + A11:2020	EN55014-2:1997 + A1:2001 + A2:2008	EN61000-3-2:2014	EN61000-3-3:2013	EN60312-1:2017				
Supply of Machinery	Regulations			EMC Regulations				Ecodesign Requirements for EN60312-1:2017	Vacuum Cleaners		RoHS	Regulations
S.I. 2008: 1597				S.I. 2016: 1091				2009/125/EC	EU/666/2013	(S.I. 2010:2617)	S.I. 2012: 3032	

Position: Head of Technology Authorised Signatory: Mr. Matthew Coles

Numatic International Limited, Chard,

Somerset, TA20 2GB, UK

Signed: McColo Date: 5th February 2024

Manufacturer / Vyrobce / Hersteller / Fabrilant / Fabricante / Toodp Fabricant / Gramholoss / Fabricant / Fabricante / Producent / Producent / Fabricante / Producent	on more representation of the control of the contro	Vaatur nternati	I talyado estadoras l'antitadoras l'antitado
A Shoroncy Aument Confirmed and Make Two. The Confirmed and Make Two Confirmed C	matic parešku vie kad pirmiau minėti tirka šiame dietkyvasi albaren umatic hiet pilpien en moratic dat het dipen en moratic hiet albaren dietkaren herve albaren dietkaren ferve	1:2012	No vita man is obtained to the control of the contr

		EN60335-2-69:2012
		EN62233:2008
2014/30/EU	EMC Directive	EN55014-1:2017 + A11:2020
		EN55014-2:1997 + A1:2001 + A2:2008
		EN61000-3-2:2014
		EN61000-3-3:2013
2009/125/EC	Ecodesign Requirements for	
EU/666/2013	Vacuum Cleaners	
2011/65/EU	RoHS Directive	
Authorised Signatory: Mr. Matthew Coles	atthew Coles	Position: Head of Technology

DEC-079 V2.3

Numatic International Limited

Somerset, TA20 2GB, UK

Date: 5th February 2024

Signed:

Chard,



numatic.com

Numatic International Limited (Head Office)

Chard, Somerset TA20 2GB, UNITED KINGDOM

Tel: 01460 68600 numatic.com

Numatic International GmbH

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND

Tel: +49 (0) 511 984 2160 numatic.de

Numatic International Denmark

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND

Tel: +45 (0) 316 40808 numatic-online.dk

Numatic International S.A.S

13/17 rue du Valengelier, EAE la Tuilerie, 77500 Chelles, FRANCE

Tel: +33 (0) 164 726 161 numatic.fr

Numatic International BV

Vennootsweg 15, 2404 CG, Alphen aan den Rijn, NEDERLAND

Tel: +31 (0) 172 467 999 numatic.nl

Numatic International Schweiz AG.

Sihlbruggstrasse 3A, 6340 Baar, SCHWEIZ

Tel: +41 (0) 41 768 0760 numatic.ch

Numatic International (PTY) Ltd.

Cnr. 16th & Pharmaceutical Road, Randjes Park, Midrand 1685, SOUTH AFRICA

Tel: +27 (0) 861 686 284 numatic.co.za

Numatic International ULDA

Rua Francisco da Silva Duarte, nº79,

4475-269 Santa Maria de Avioso. Castêlo da Maia. PORTUGAL

Tel: +351 220 047 700 numatic.pt

NUMATIC INTERNATIONAL SPAIN, S.L.U.

Av. Baix Llobregat, 5-7, Oficina bajos 1 (Parc Negocis Mas Blau II),

08820 El Prat de Llobregat (Barcelona) SPAIN

Tel: +34 93 647 22 22 numatic.es

Numatic International Italy S.R.L.

Via Luigi Galvani, 2, Z.I. Talponedo, 33080 Porcia (PN), ITALY

Tel: +39 (0) 434 046 211 numatic.it

Specification subject to change without prior notice numatic.com © Numatic International Limited